

## **UNDERBENCH DRAWERS ASSEMBLY TIPS**




With your assembled bench upside down (on cardboard to prevent scratches), place the drawer unit in position – line up the front of the drawer unit with the front of the support bar and ensure the back is lined up with the back support bar on the bench top. (Figure 1)

Ensure the front of the drawer is on the open side of your rails or facing the front of your bench.

Use the tech screws and a power drill to attach the drawer. No pilot holes are necessary, however a strong drill is needed.

Attach the drawer unit by screwing into the front support bar (shown below) and along the back of the drawer into the rear bench support bar.

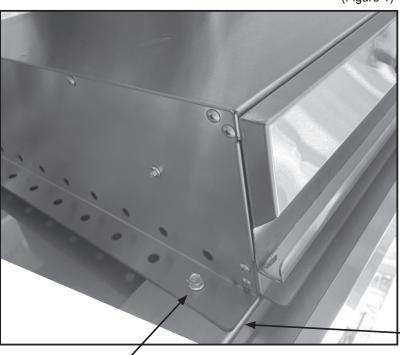

(Figure 1)

You will need to use a power drill to screw the tech screws into the bench support bars. No pilot hole required.

Position the drawer by lining up to the edge of the support bars underneath the bench.

For more information please contact your nearest Brayco Branch AUSTRALIA 1300 272 926 customercare@brayco.com.au Brayco.com.au

**NEW ZEALAND** 09 271 5000 sales@braycostainless.co.nz Braycostainless.co.nz

